



Instructions to change the output setting on the Apollo Solar TSW Inverter.

1. Run the AIM Software. The following screen will appear:

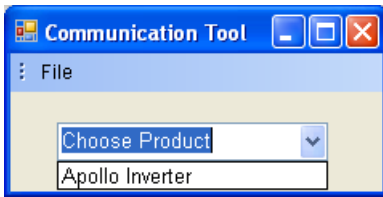


2. Select “Apollo Inverter” from the pull down menu. The following screen will appear:

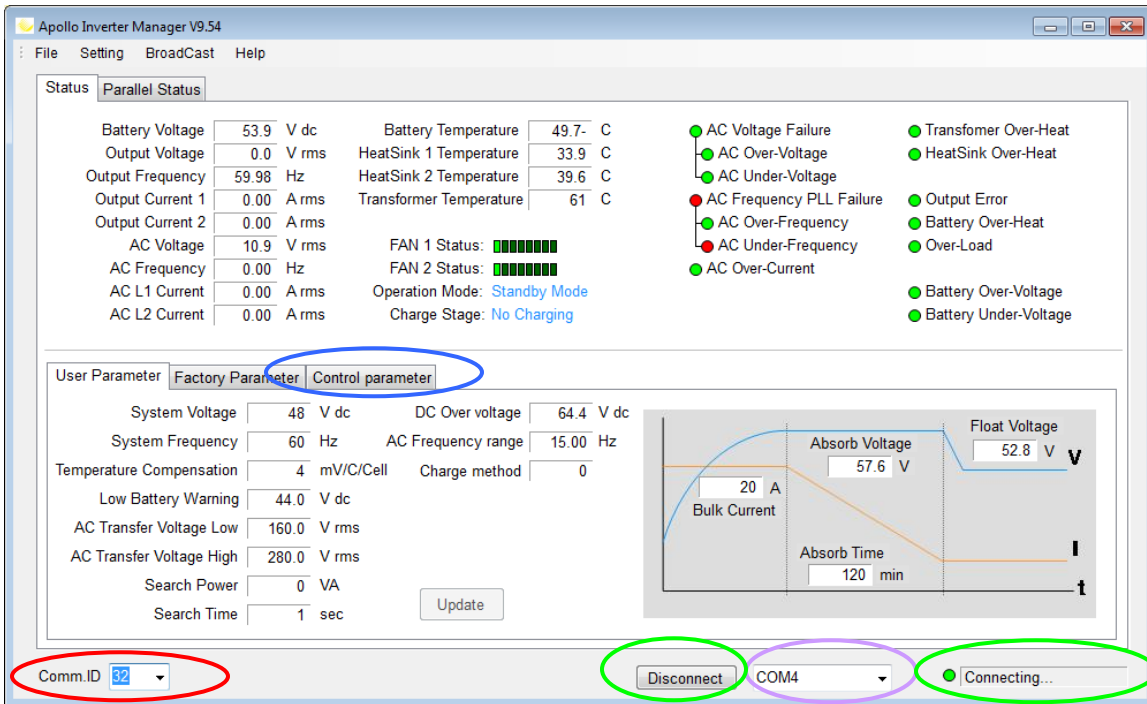

3. Connect the AIM device & Cable between the Inverter & the USB Port of you Computer.
4. Power Up the Inverter & put it in standby by pressing the Standby button.
5. Select the correct **COM Port** for your AIM device.
6. Select the correct **Comm. ID** for your inverter (the default is 32).
7. Press the **Connect** button and verify that the box to the right displays “**Connecting...**”.
8. Select the **Control parameter** tab. The following screen will appear:

Instructions to change the output setting on the Apollo Solar TSW Inverter.

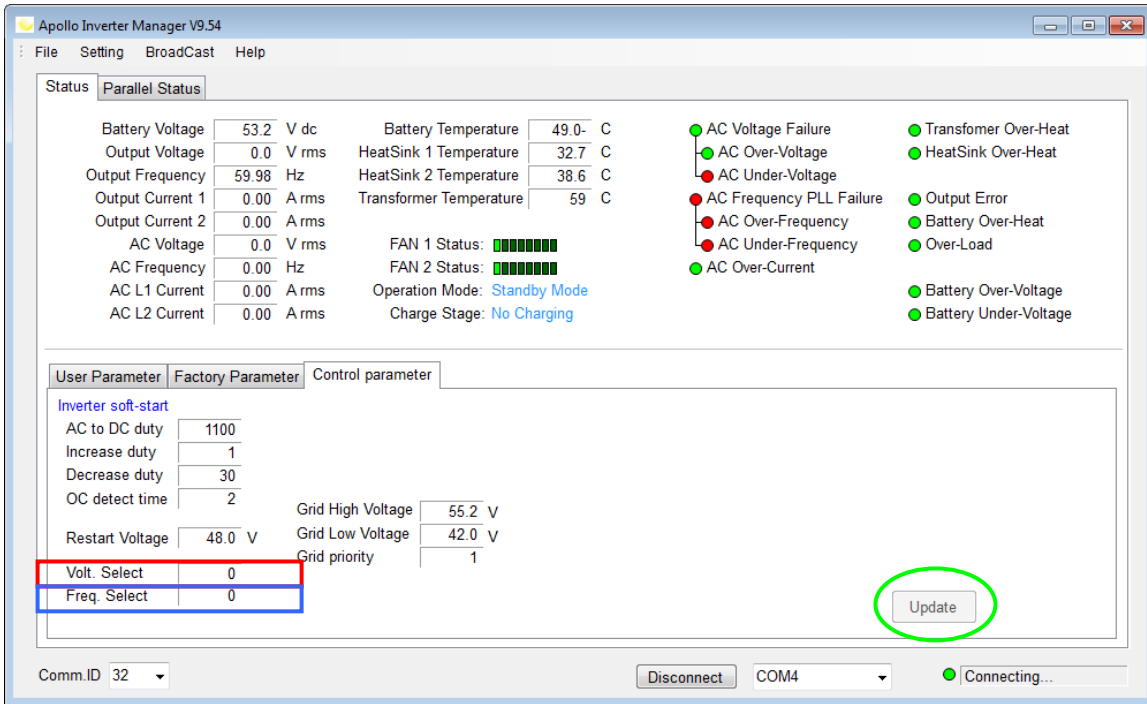

9. Set the **Volt. Select** to 1 (for 230V Operation).
10. Set the **Freq. Select** to 1 (for 50Hz Operation).
11. Press the Update Button.
12. Reboot the Inverter for the output to reflect the changes.